


# acrobat surface

## installation instruction






## Step 1

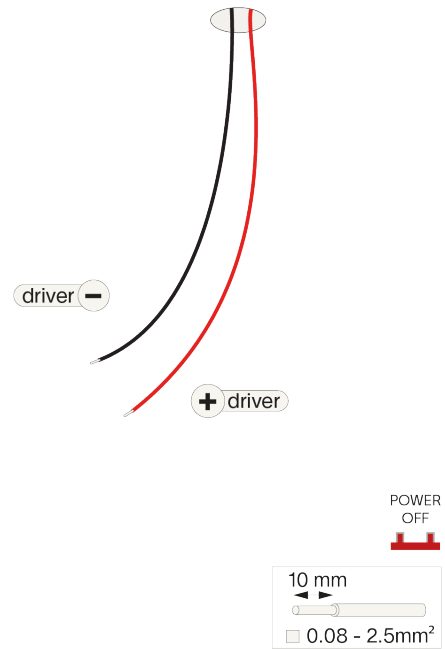

Turn the power off.


## Step 2

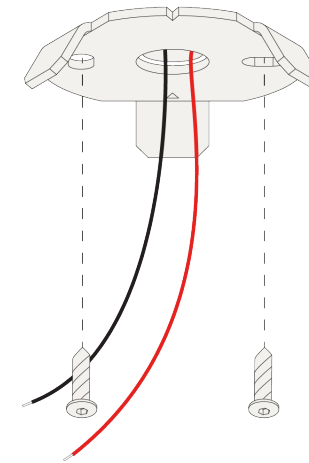

Fix the mounting plate on the ceiling with appropriate screws.




## Step 3

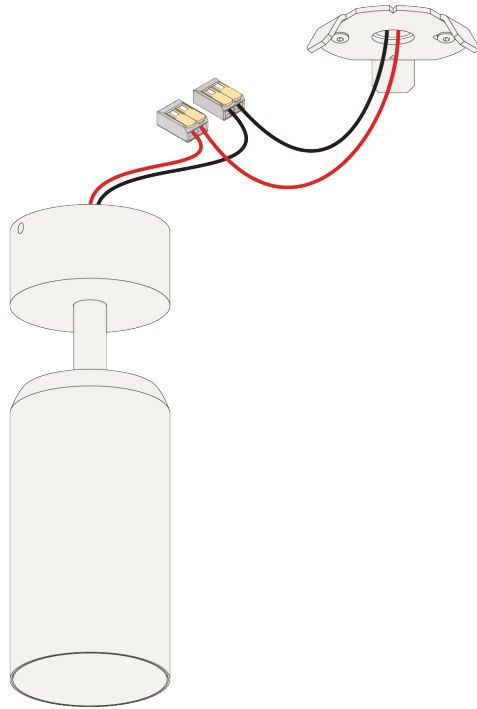

Connect the wires with the wago connectors for serial connection, respect polarity combine with a prado LED-driver.


## Step 4

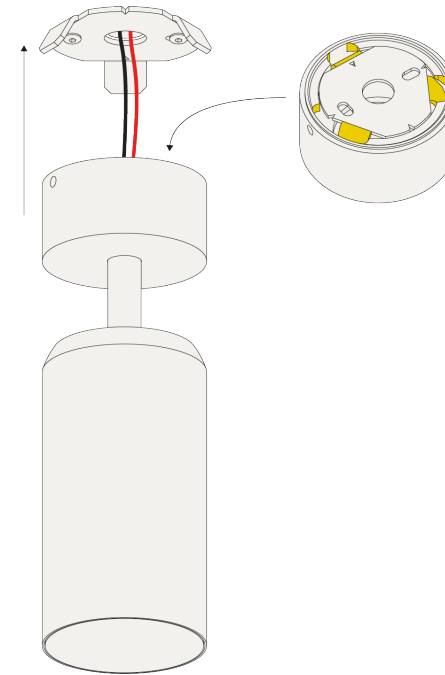


To attach the luminaire to the ceiling align the legs of the ceiling plate to the openings in the luminaire.



Step 5

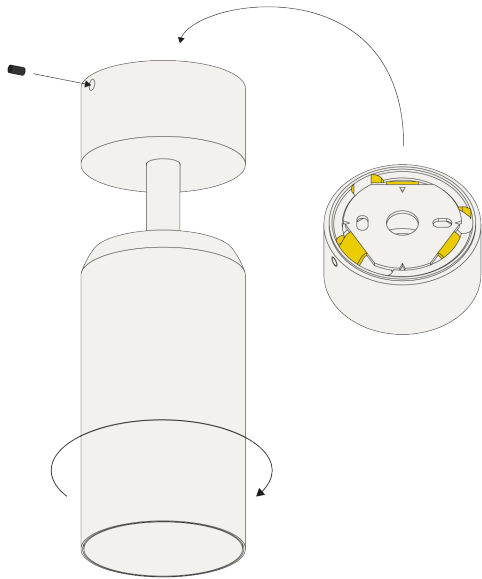

Step 6

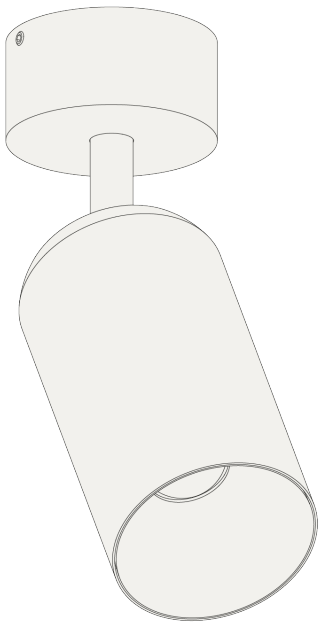

POWER  
ON



Twist the luminaire clockwize and fasten the screw to lock the luminaire.

			IP 44	CE		Replace glass lens when broken. Luminaire shall only be used together with glass lens.
--	--	--	-------	----	--	-------------------------------------------------------------------------------------------