


# acrobat mini trim short installation instruction




## Step 1

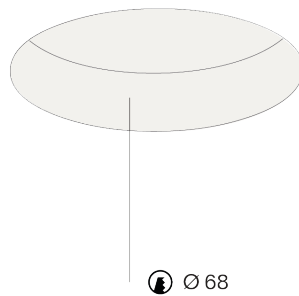

Cut a round hole (Ø 68). Consult the chosen luminaire tech specs for required height and free air dimensions.


## Step 2

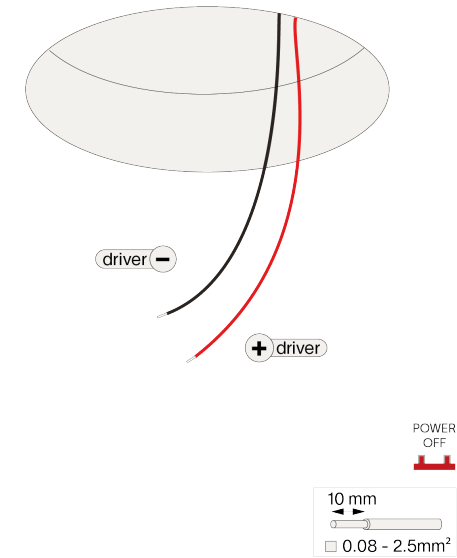


constant current (mA)	typical forward voltage (V)	typical power (W)
350	16,9	5,9
500	17,4	8,7
700	18,2	12,7

See packaging or fixture label for maximum current.

## Step 3

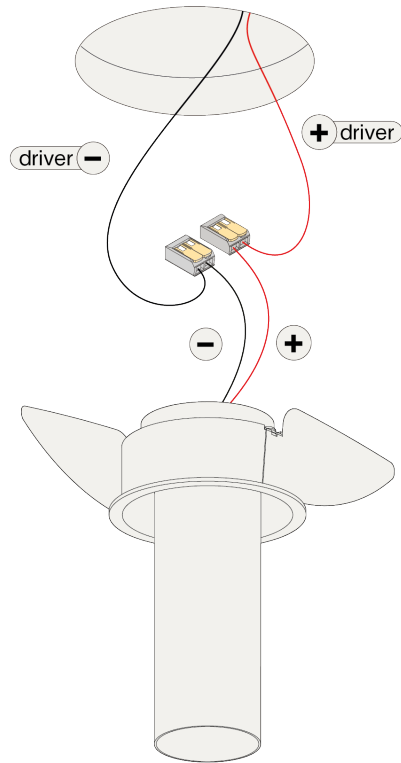


## Step 4

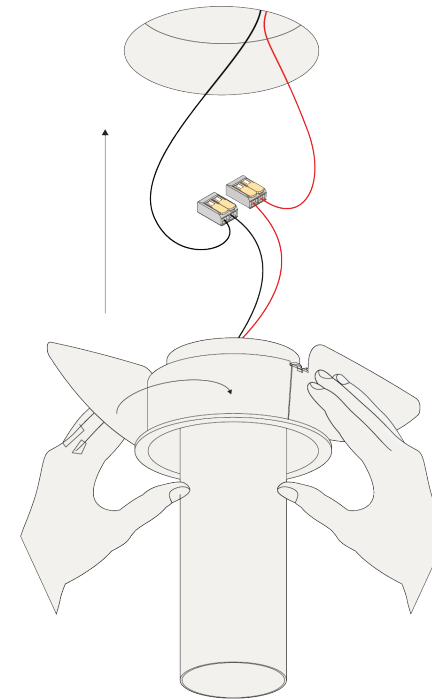

Connect the wires with wago connectors for serial connection, respect polarity combine with a prado LED-driver.

Bend over the springs and push the luminaire into the ceiling.

## Step 5

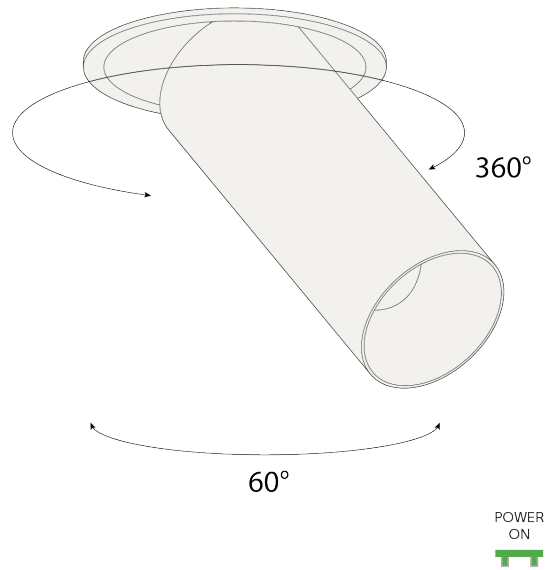

Twist the luminaire as desired.

