


# invisible E27

## installation instruction




Step 1

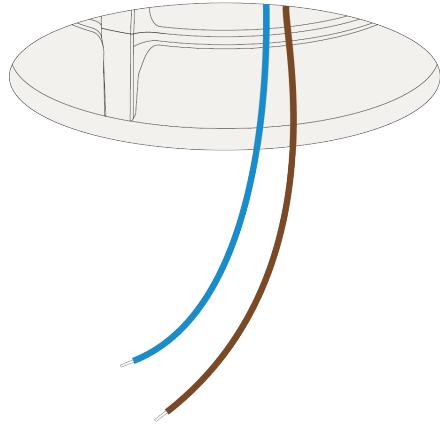


Turn off the power before starting.

Step 2

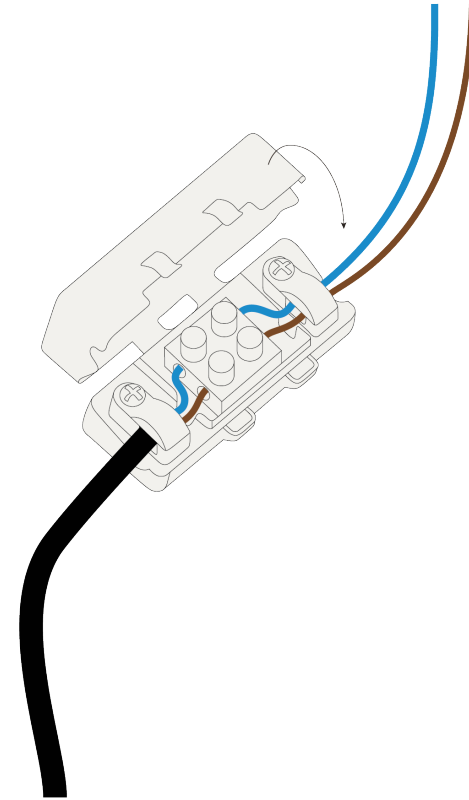


Connect the 230V wires with the terminal block and close the block.

Step 3

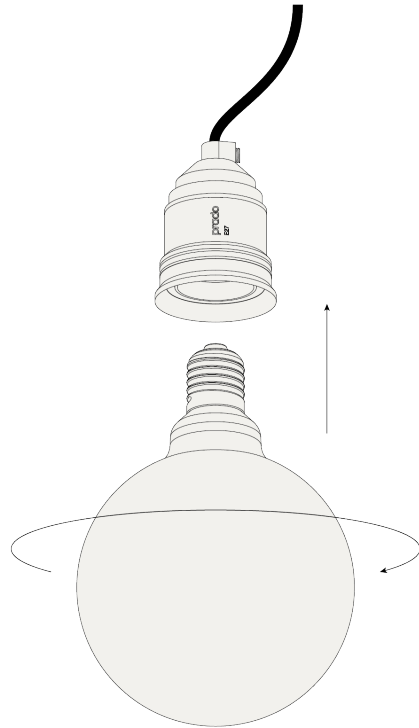


Screw the light bulb into the prado invisible E27 socket.

Step 4

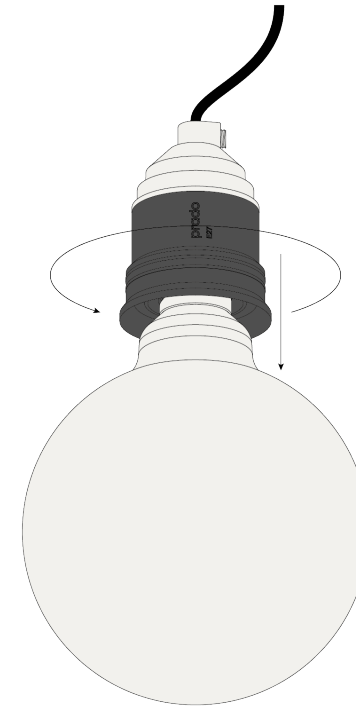

Gently screw the first ring towards the light bulb.

Step 5

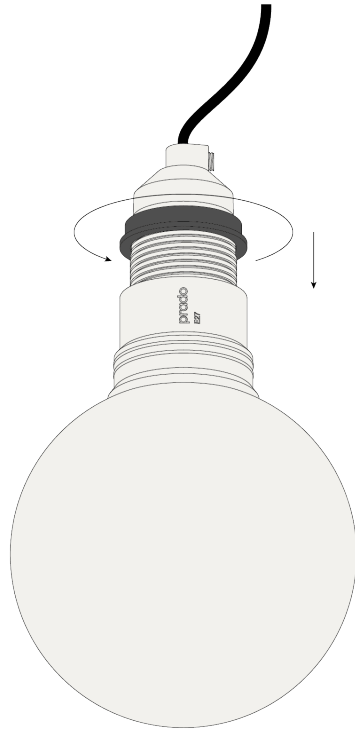

Lock the first ring with the second ring.


Step 6



Click the luminaire into the plaster ring.

Step 7

---

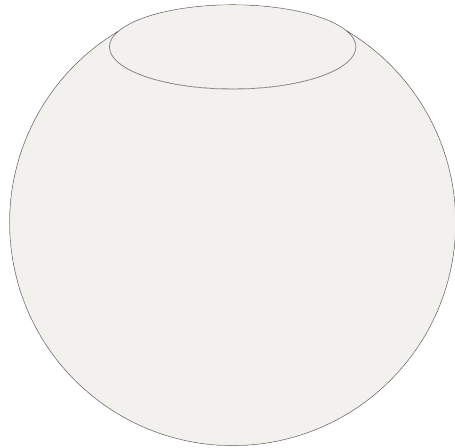

---

Turn power back on.

