


invisible E27

installation instruction



Step 1

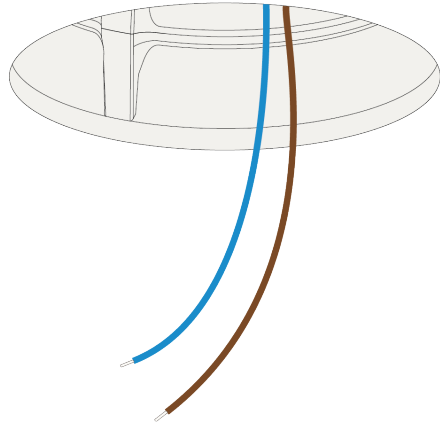


POWER
OFF




Turn off the power before starting.

Step 2

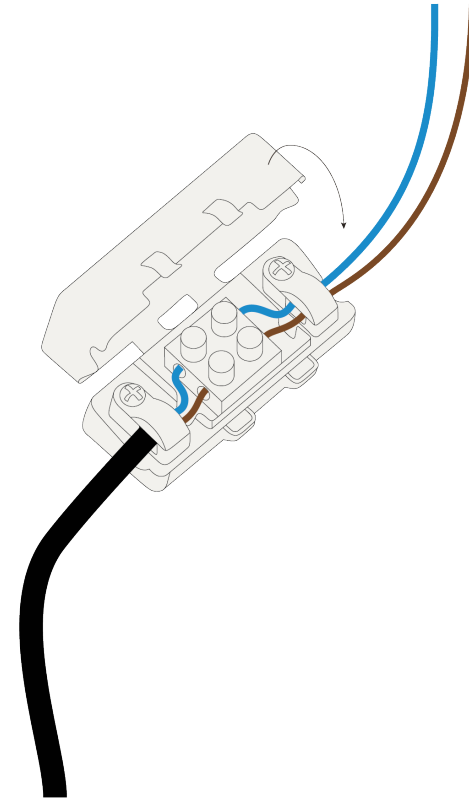


Connect the 230V wires with the terminal block and close the block.

Step 3

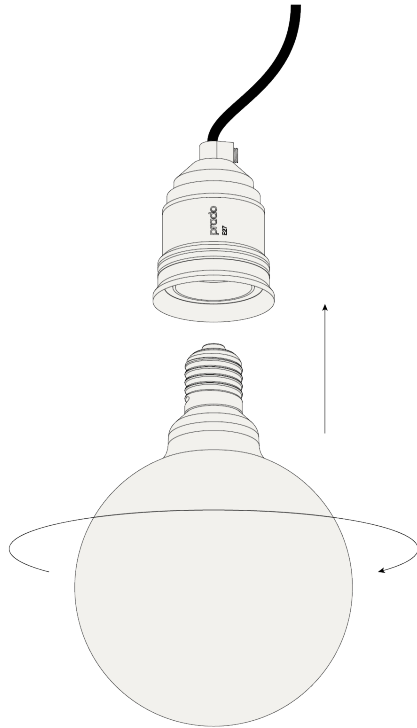


Screw the light bulb into the prado invisible E27 socket.

Step 4

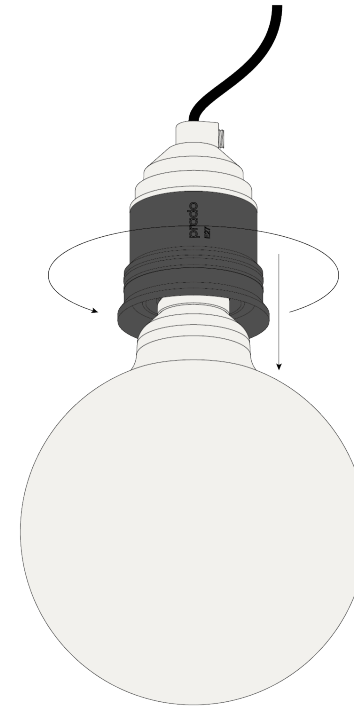

Gently screw the first ring towards the light bulb.

Step 5

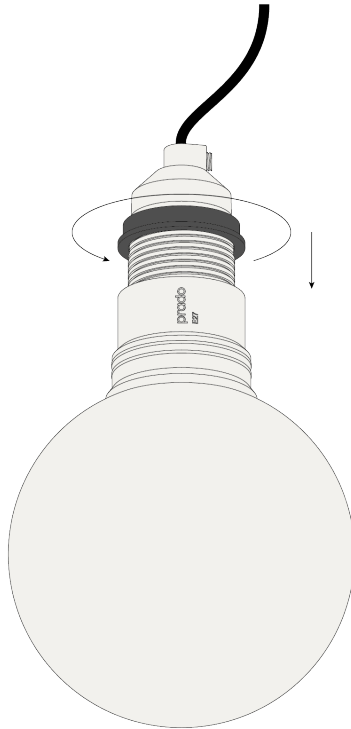


Lock the first ring with the second ring.

Step 6



Click the luminaire into the plaster ring.

Step 7

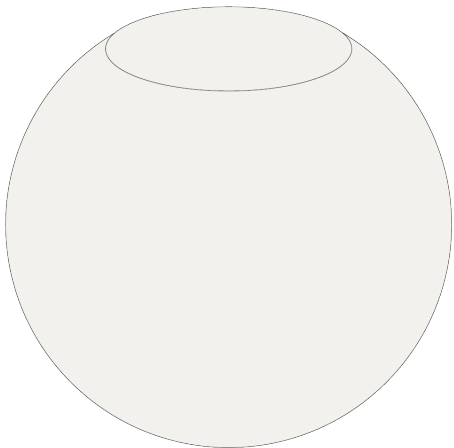

Turn power back on.

