


# light + motion trimless installation instruction




## Step 1

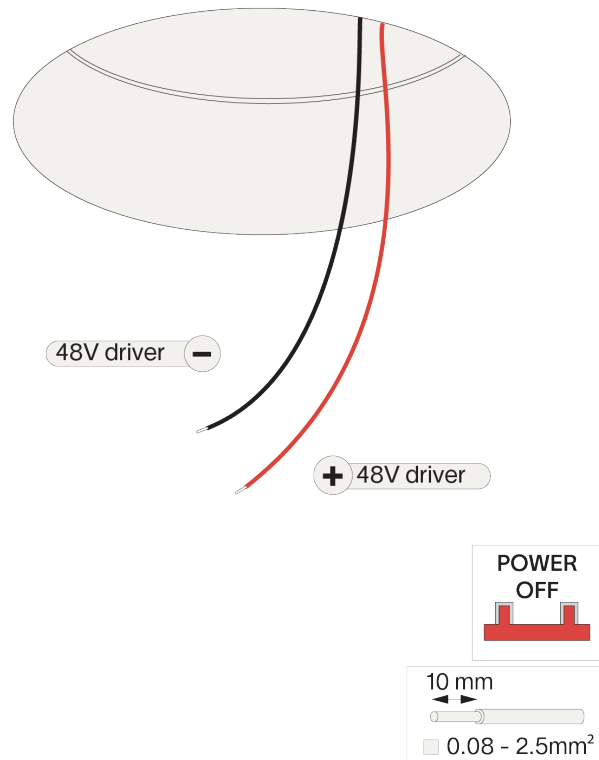


Turn the power off.

## Step 2

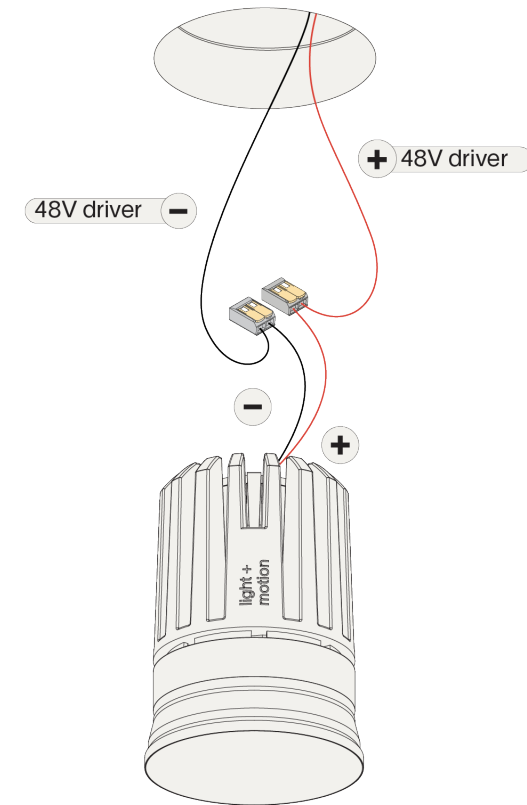

Connect the wires with wago connectors for parallel connection, respect polarity combine with a prado LED-driver.

Step 3

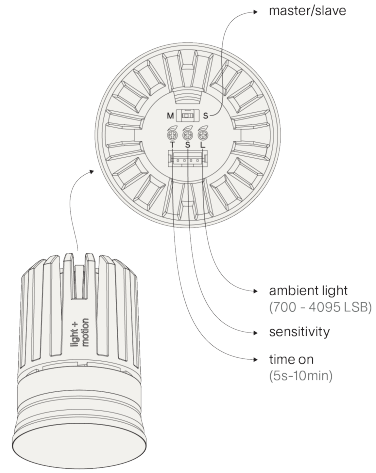


- standard settings
- ambient light: 1700 LSB
  - sensitivity: no pets detectable
  - time on: 5min

if desired update standard settings with a screwdriver



|                       |                        |
|-----------------------|------------------------|
| ↶                     | ↷                      |
| T = short time on     | T = long time on       |
| S = low sensitivity   | S = high sensitivity   |
| L = low ambient light | L = high ambient light |

Step 4

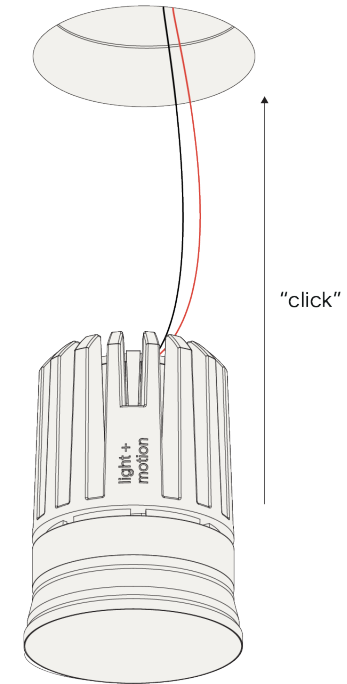


Gently click the luminaire into the plasterkit.

## Step 5

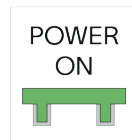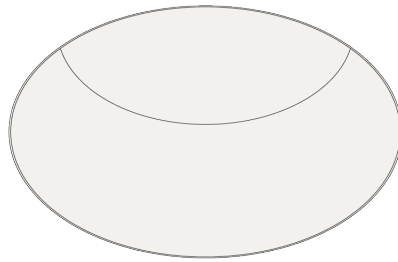

Turn the power back on.

## Step 6

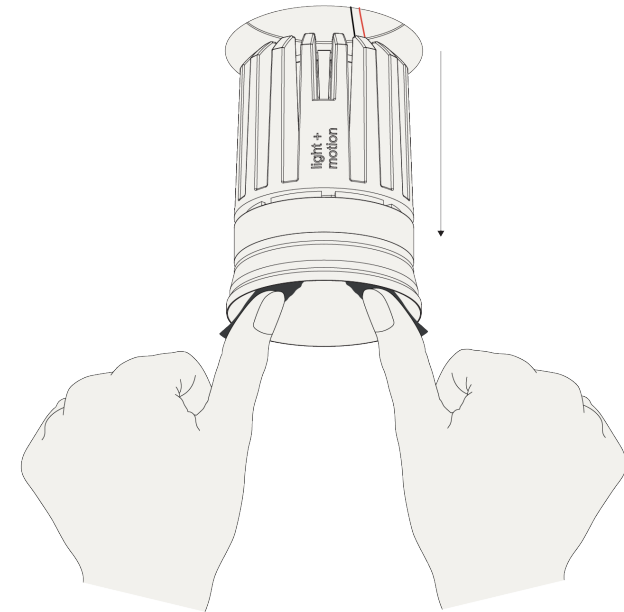

For both maintenance and the adjustment of settings, the luminaire can be removed from the plasterkit using duct tape.

