


# light + motion trimless

## installation instruction




## Step 1

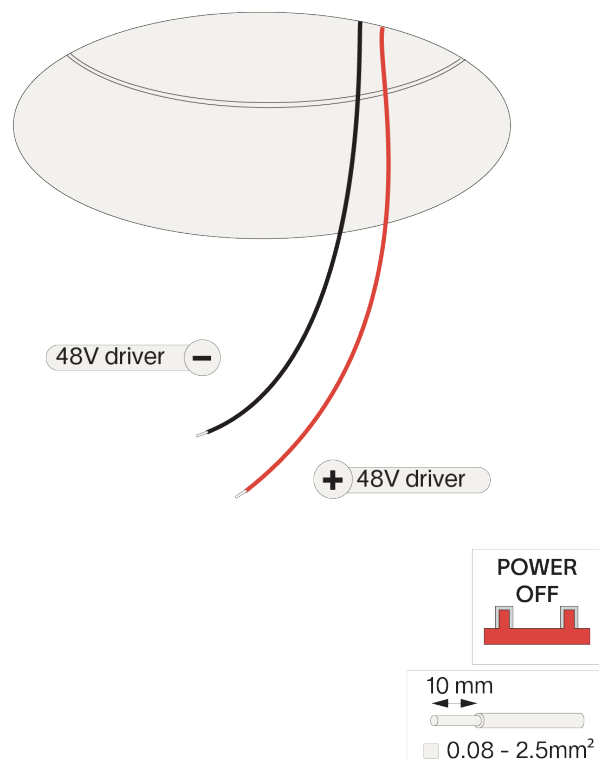


Turn the power off.

## Step 2

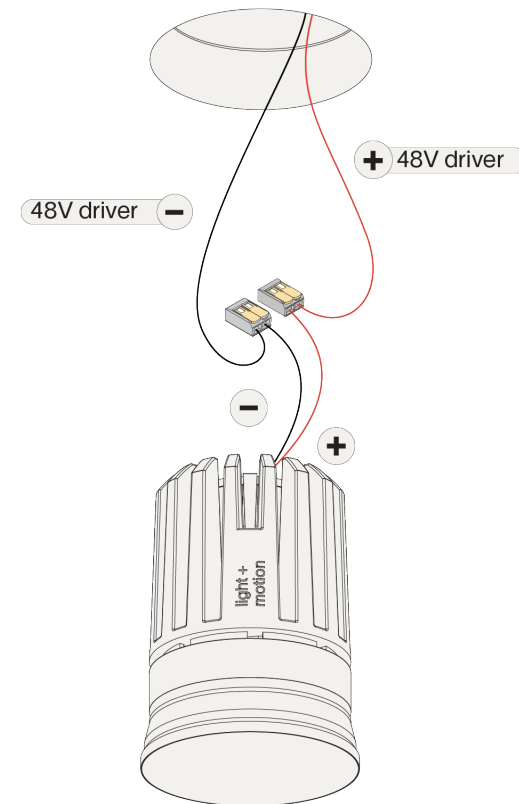

Connect the wires with wago connectors for parallel connection, respect polarity combine with a prado LED-driver.

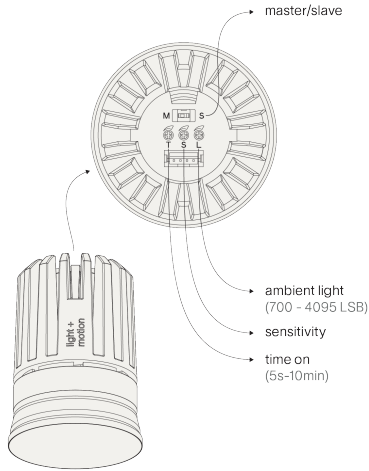

Step 3




standard settings

- ambient light: 1700 LSB
- sensitivity: no pets detectable
- time on: 5min

if desired update standard settings with a screwdriver



	
T = short time on	T = long time on
S = low sensitivity	S = high sensitivity
L = low ambient light	L = high ambient light

Step 4

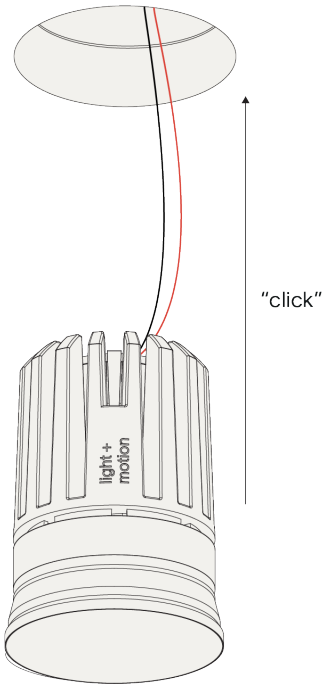


Gently click the luminaire into the plasterkit.

## Step 5

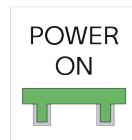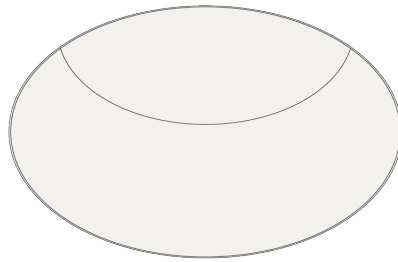

Turn the power back on.

## Step 6

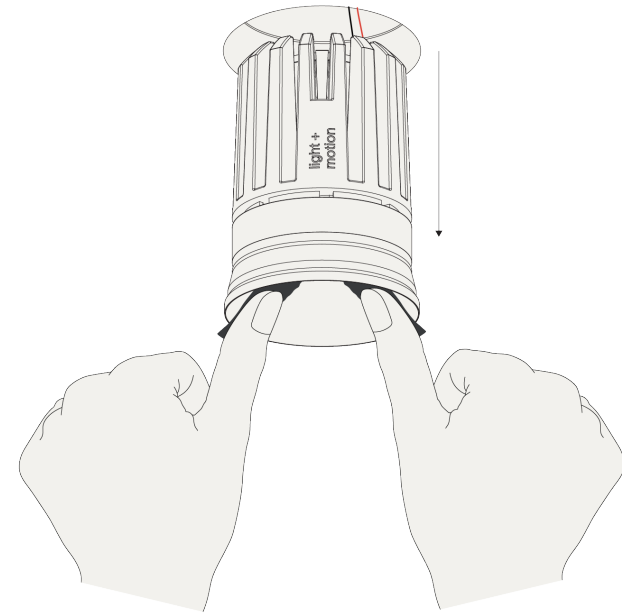

For both maintenance and the adjustment of settings, the luminaire can be removed from the plasterkit using duct tape.

