

# trimless spot Ø57

## installation instruction




Step 1

| constant current (mA) | typical forward voltage (V) | typical power (W) |
|-----------------------|-----------------------------|-------------------|
| 350                   | 16,9                        | 5,9               |
| 500                   | 17,4                        | 8,7               |
| 700                   | 18,2                        | 12,7              |


See packaging or fixture label for maximum current.

Step 2

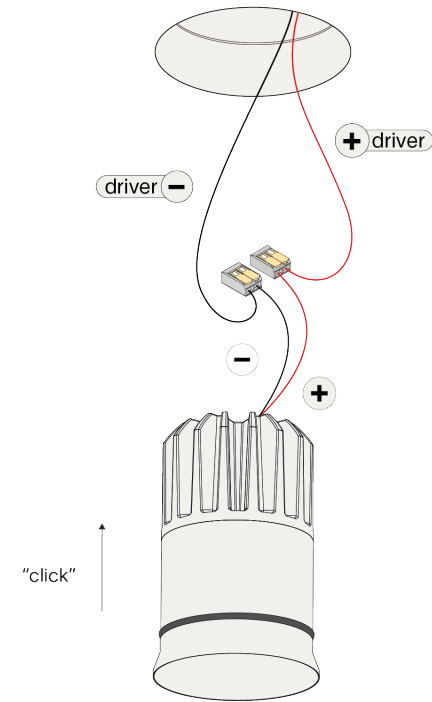

Connect the wires with wago connectors for serial connection, respect polarity combine with a prado LED-driver.

## Step 3

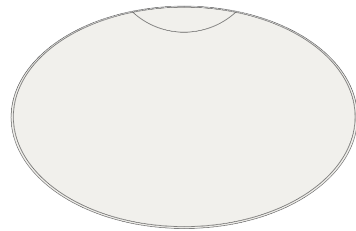


POWER  
ON



Turn the power back on.


## Step 4

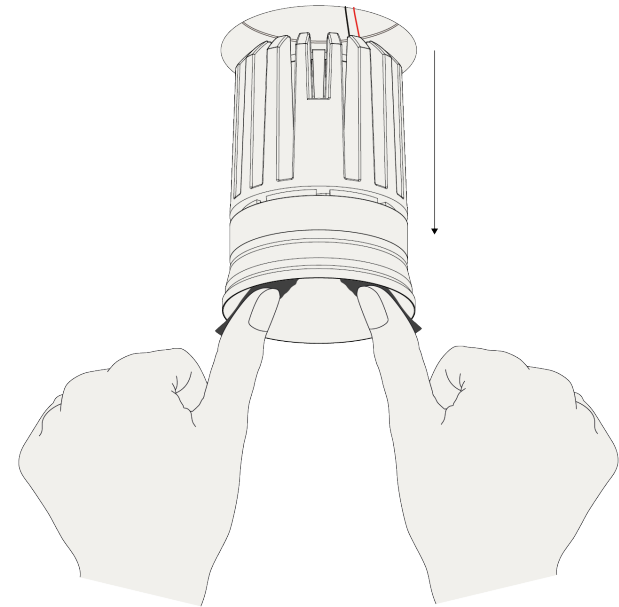

In case maintenance would be needed, the luminaire can be removed from the plaster ring without doing any damage by using duct tape.

Step 5

recommended free air dimensions

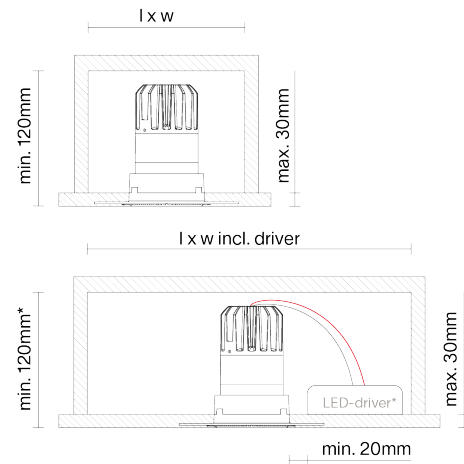

| constant current (mA) | I x W (mm) | I x W incl. driver (mm) |
|-----------------------|------------|-------------------------|
| 500                   | 100 x 100  | 200 x 200               |
| 700                   | 200 x 200  | 250 x 250               |

|  |  |  |       |  |  |   |
|--|--|--|-------|--|--|---|
|  |  |  | IP 44 |  |  | Replace glass lens when broken.<br>Luminaire shall only be used together with glass lens. |
|--|--|--|-------|--|--|---|