

# trimless spot Ø57

## installation instruction




Step 1

constant current (mA)	typical forward voltage (V)	typical power (W)
350	16,9	5,9
500	17,4	8,7
700	18,2	12,7


See packaging or fixture label for maximum current.

Step 2

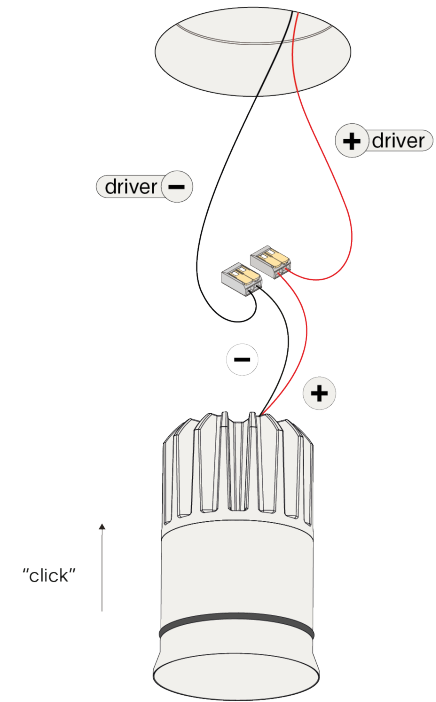

Connect the wires with wago connectors for serial connection, respect polarity combine with a prado LED-driver.


Step 3

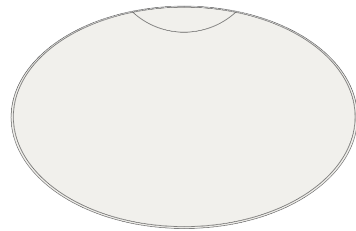

POWER  
ON  


Turn the power back on.


Step 4

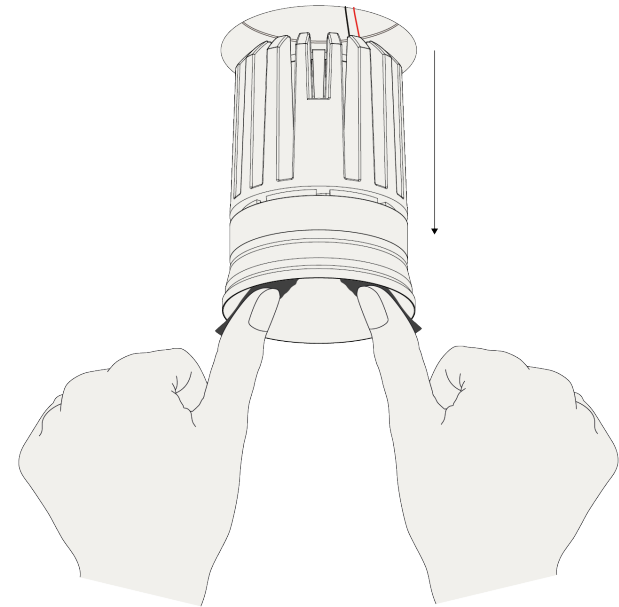

In case maintenance would be needed, the luminaire can be removed from the plaster ring without doing any damage by using duct tape.

Step 5

recommended free air dimensions

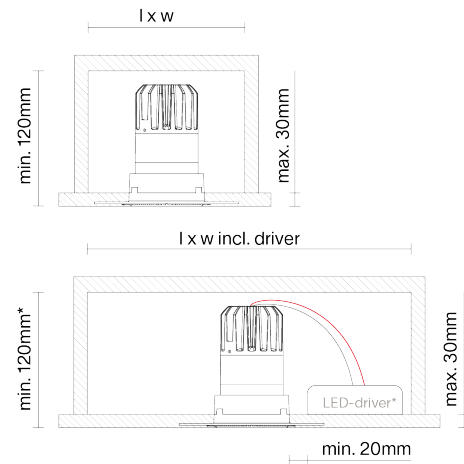

constant current (mA)	I x W (mm)	I x W incl. driver (mm)
500	100 x 100	200 x 200
700	200 x 200	250 x 250

			IP 44			Replace glass lens when broken. Luminaire shall only be used together with glass lens.
--	--	--	-------	--	--	---