



# Plaster ring jack

## installation instruction

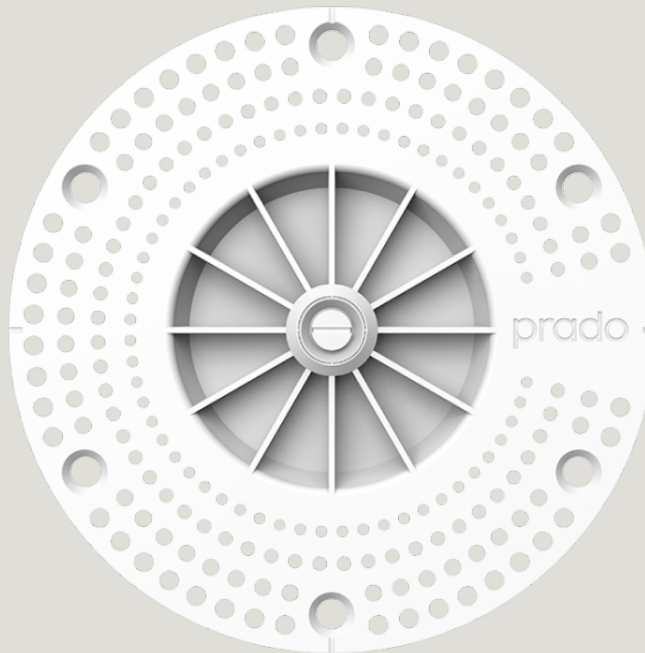


## Step 1

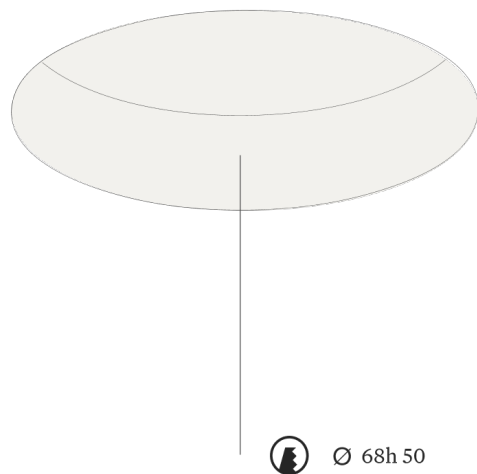


Cut a round hole (Ø 68 h 50) Suited for indoor, non-sloped ceilings only.

## Step 2

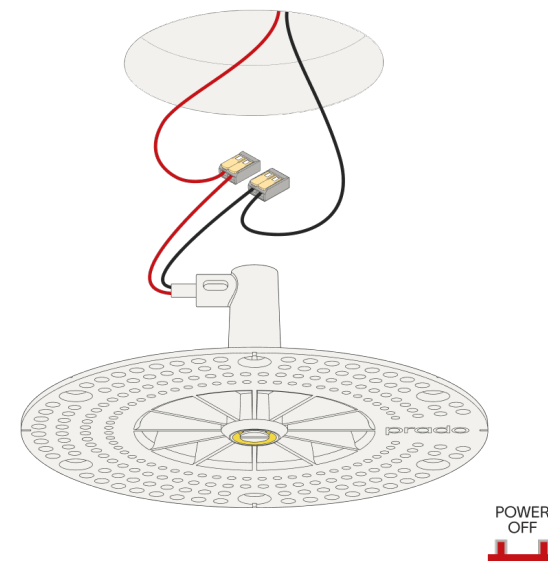


Connect the wires with wago connectors. For serial connection, respect polarity.

## Step 3

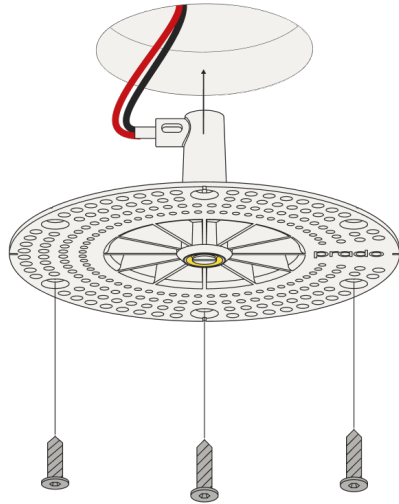


Insert the plaster ring and securely fasten it with glue or the appropriate screws on a screwfast surface. The attachment must be able to obtain a static load of 5 kg. It's the installers responsibility to ensure optimal attachment. We advise to test the electrical connection before starting to plaster.

## Step 4

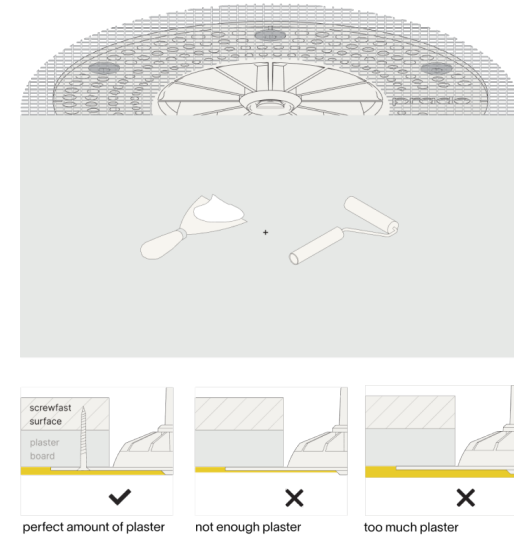


Excercise caution while plasering, do not damage the ring. Keep the plaster lid inside the plaster ring while plastering. Use a fiberglass mesh tape for optimal plaster adhesion. Make sure not to touch the edge of the ring when sanding.

## Step 5

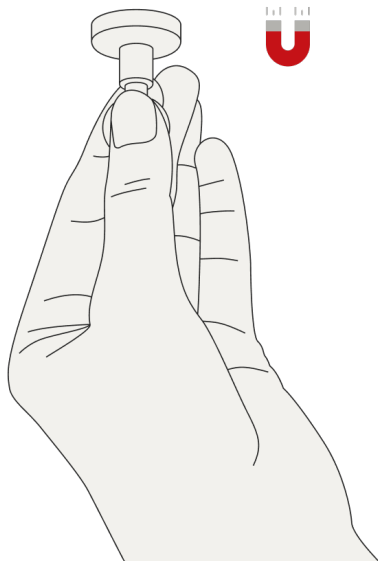

Carefully remove excess plaster to access the screw. You can easily locate the jack kit by using a magnet.

## Step 6

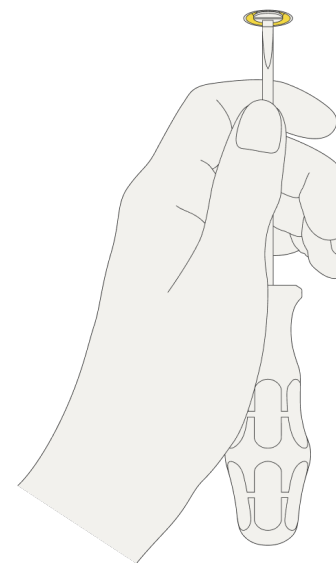


Twist the yellow plaster lid with a screwdriver before removing it with a magnet.

---

Step 7

---

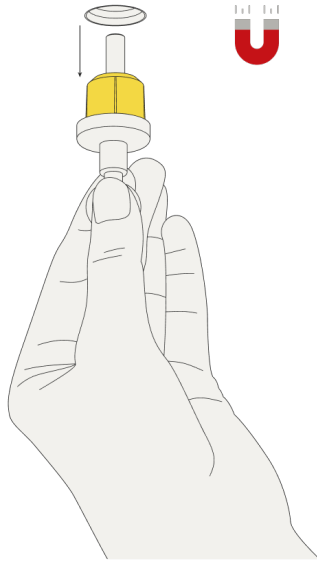

---

Twist the yellow plaster lid with a screwdriver before removing it with a magnet.