



acrobat micro short installation instruction

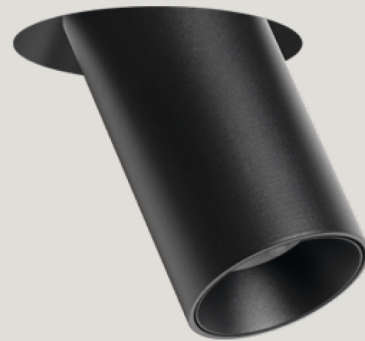


Step 1

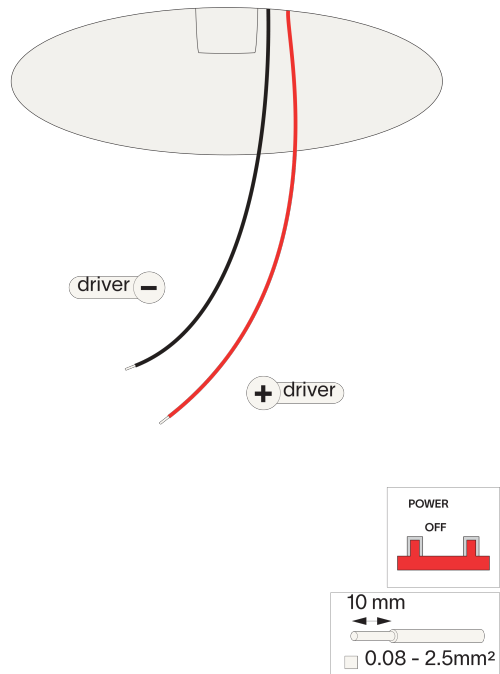


Turn the power off - driver location remote.

Step 2

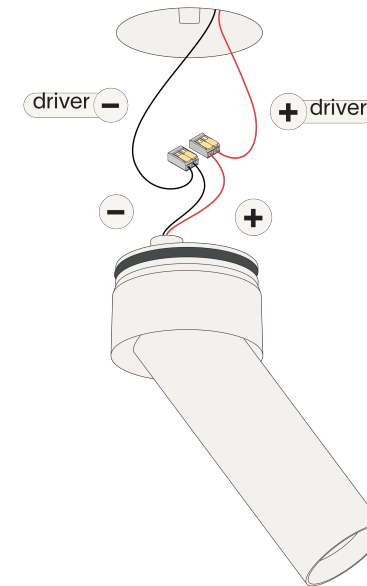


Connect the wires with wago connectors for serial connection, respect polarity combine with a prado LED-driver.

Step 3

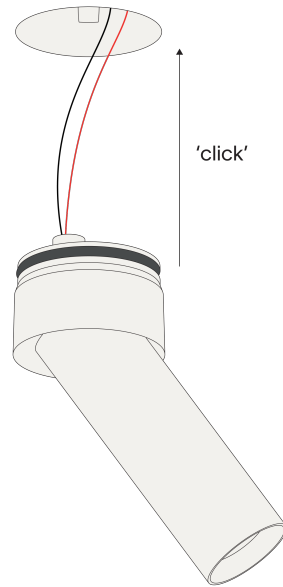

Gently insert the fixture into the kit until it “clicks”.

Step 4

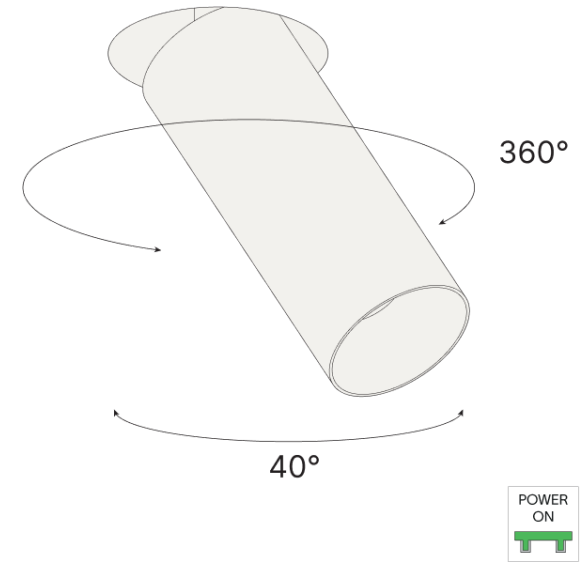

Twist the luminaire as desired.

			IP 20	CE		Replace glass lens when broken. Luminaire shall only be used together with glass lens.
--	--	--	-------	----	--	---