


wallwash trimless installation instruction

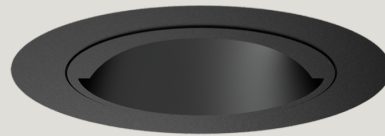


Step 1

| constant current (mA) | typical forward voltage (V) | typical power (W) |
|-----------------------|-----------------------------|-------------------|
| 350 | 16,9 | 5,9 |
| 500 | 17,4 | 8,7 |
| 700 | 18,2 | 12,7 |


See packaging or fixture label for maximum current.

Step 2

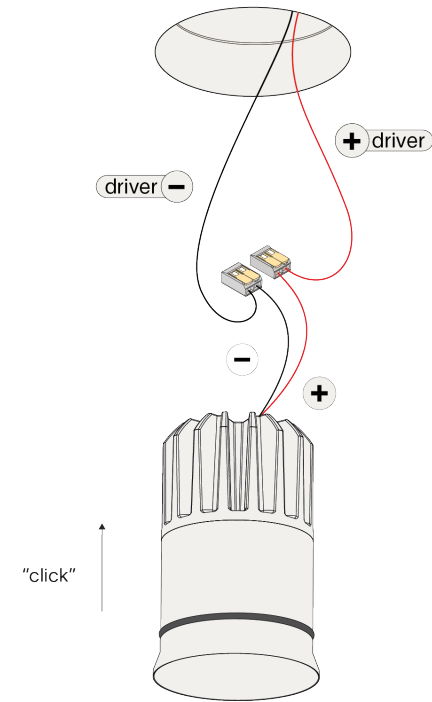

Connect the wires with wago connectors for serial connection, respect polarity combine with a prado LED-driver.


Step 3

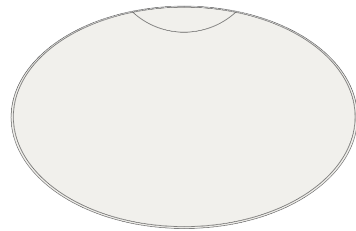

POWER
ON


Turn the power back on.


Step 4

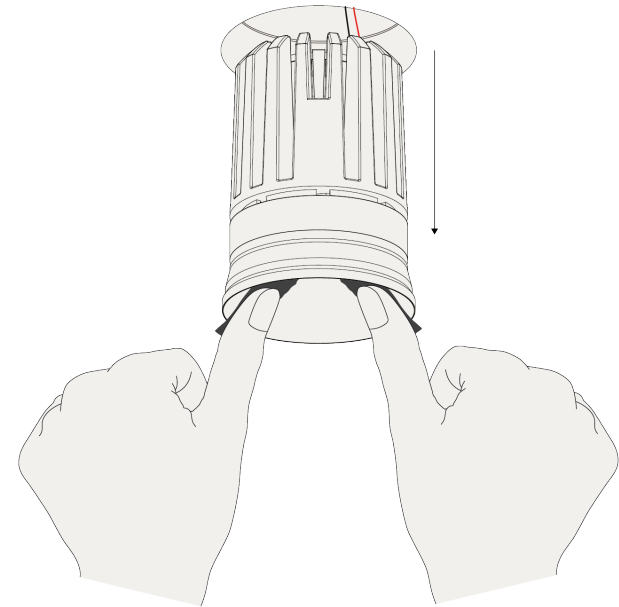

In case maintenance would be needed, the luminaire can be removed from the plaster ring without doing any damage by using duct tape.

Step 5

recommended free air dimensions

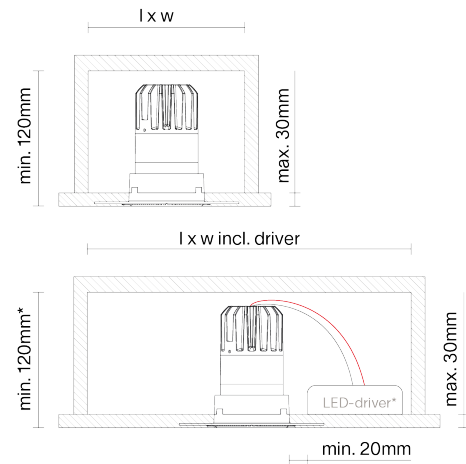

| constant current (mA) | l x W (mm) | l x W incl. driver (mm) |
|-----------------------|------------|-------------------------|
| 500 | 100 x 100 | 200 x 200 |
| 700 | 200 x 200 | 250 x 250 |

| | | | | | | |
|--|--|--|-------|--|--|---|
| | | | IP 44 | | | Replace glass lens when broken. Luminaire shall only be used together with glass lens. |
|--|--|--|-------|--|--|---|